



1	Fresh air vent	30	Battery main switch
2	Light test & day/night dimmer switch	31	Engine master switch
3	Warning lights	32	Glow plug light
	CED caution	33	Quad indicator
	Alternator		Fuel gauge main and auxiliary
	Fuel low level		Fuel temperature main and auxiliary
	FADEC A		Voltmeter
	FADEC B		OAT
	Towing cable hooked	34	Compact Engine Display indicator (CED-125)
	Option	35	Alternate air induction
	Coolant low level	36	Safety interbreakers (from LH to RH)
4	Flaps position indicator lights		Landing light
5	Magnetic compass		Taxiing light
6	Elevator trim position indicator		Electric fuel pump control
7	ELT remote control	37	Electric flaps control lever
8	Instrument panel lighting (from LH to RH)	38	Breakers
	Light 1: panel lights	39	Cabin heat/windshield defrost control
	Light 2: Overhead flood lights	40	Standard headset jacks
	Light 3: Radio & instruments	41	Alternator relay switch
9	Safety interbreakers (from LH to RH)	42	FADEC B forcing switch
	Navigation light	43	Avionic master switch
	Strobe light	44	FADEC test button
	Option	45	Starter key
10	Pending SafetyR control light	46	CED-125 lighting knob
11	Airspeed indicator (knots_km/h)	47	CED warning light RAZ knob
12	Gyro horizon	48	Single power lever
13	Altimeter sensitive (ft-mb)	49	Fuel tank selector
14	Avionics Breakers	50	Parking brake control knob
15	Cabin main heat knob	51	Horameter
20	Stopwatch, Voltmeter, OAT	52	Auxiliary 12V socket
21	Bank indicator (Ball type)	53	Push to talk
22	Attitude indicator	54	Elevator trim control
23	Rate of climb indicator (ft/min)	55	Alternator circuit breaker
24	USB plug	56	Bose headset jack
25	Storage box	57	Auxiliary tank fuel transfer valve control
		58	Fuel T°C & quantity in auxiliary tank control knob